

XT SYSTEM USER GUIDE



Full XT System User Guide

To view the full [XT System User Guide](#), scan this QR code or visit [DMP.com](https://www.dmp.com).

How to Handle an Alarm

Enter your user code or present your credential to the keypad if it has a built-in proximity reader.

You will see:

IS THIS A FALSE ALARM? YES NO or **CANCEL VERIFY**

Real Alarm

Press **NO** or **VERIFY** to notify the emergency monitoring center. Your system will remain armed.

False Alarm

Press **YES** or **CANCEL** to cancel the alarm. Your system will disarm.

Arm an All/Perimeter System

Thinline Keypads

1. Press **CMD** until **ARM DISARM** displays. Select **ARM**.
2. Enter your user code and the keypad displays **PERIM ALL**.
3. Select **ALL** to arm all areas. The keypad displays **ALL SYSTEM ON**. Select **PERIM** to arm only the perimeter. The keypad displays **PERIMETER ON**.

Touchscreen Keypads

1. Press and release the shield to open the arming options screen. Select **ARM**.
2. Enter your user code if prompted and the keypad displays **PERIM ALL**.
3. Select **ALL** to arm all areas. The keypad displays **ALL SYSTEM ON**. Select **PERIM** to arm only the perimeter. The keypad displays **PERIMETER ON**.

Disarm an All/Perimeter System

Thinline Keypads

1. Press **CMD** until **ARM DISARM** displays. Select **DISARM**.
2. Enter your user code and the keypad displays **ALL? NO YES**.
3. Select **YES** to disarm all areas. Select **NO** to disarm individual areas and select **YES** to disarm the area or **NO** to leave the area unarmed.

Touchscreen Keypads

1. Press and release the shield to open the arming options screen. Select **DISARM**.
2. Enter your user code and the keypad displays **ALL? NO YES**.
3. Select **YES** to disarm all areas. Select **NO** to disarm individual areas and select **YES** to disarm the area or **NO** to leave the area unarmed.

